


Attention when upgrading to SD009-PCR-LE_Ver3.3.7

In the European area where the decimal point is comma as standard, change a decimal point to a period by setup of control panel "Region and language" to operate SD009-PCR-LE before Ver3.3.6. I recommend to continue using then.

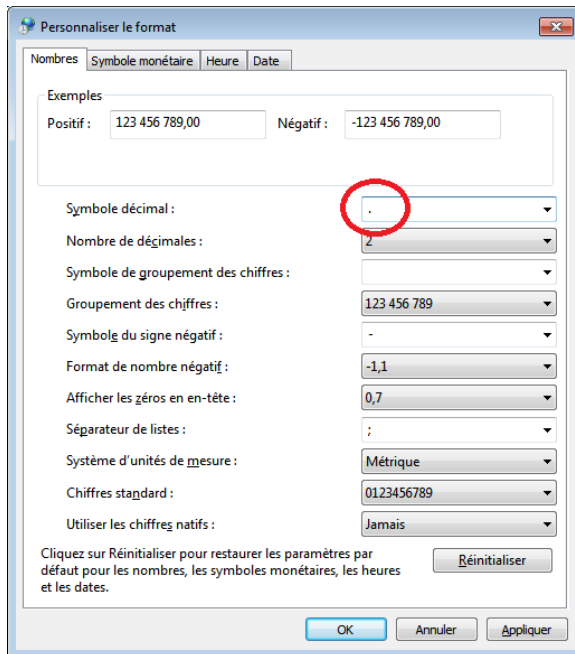


When you give back a decimal point to a comma, keep the following two indispensable matters.

(1) Delete registry.


(2) Do not use the test condition file created by Ver3.3.6 or earlier.

How to delete the registry

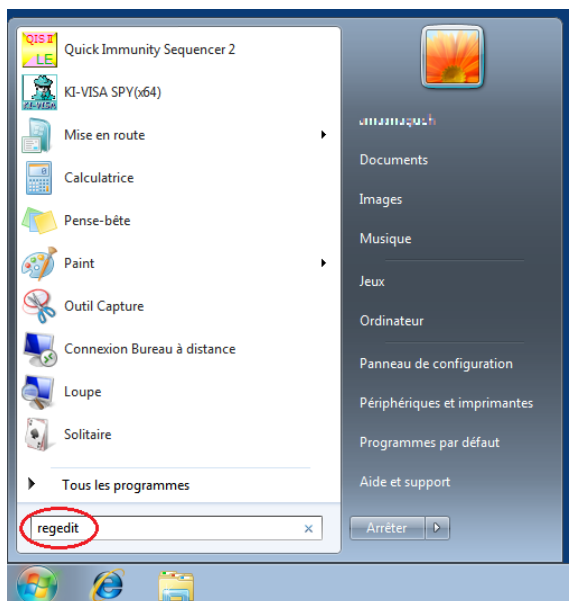


Input "regedit" into "Find a file or folder."

Attention when upgrading to SD009-PCR-LE_Ver3.3.7

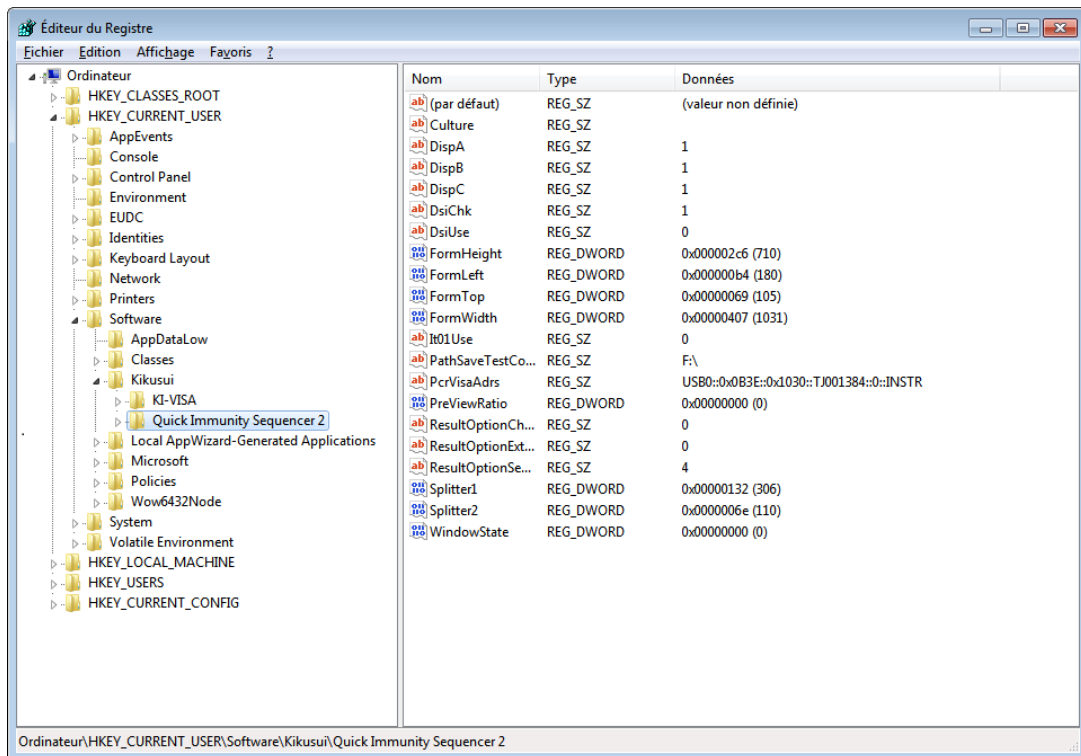

Right-click "Quick Immunity Sequencer 2" of "HKEY_CURRENT_USER\Software\Kikusui" in the registry editor.

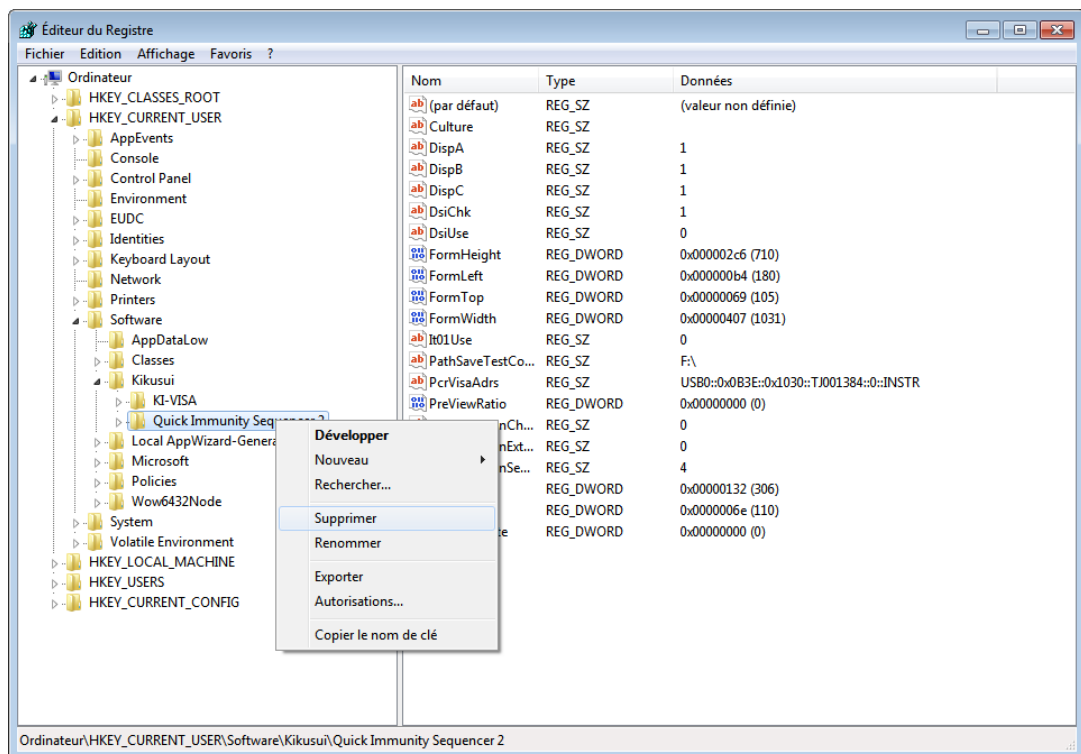

Click deletion and delete Quick Immunity Sequencer 2 completely.